




SOINS PERSONNELS
TRAITEMENT DU CORPS

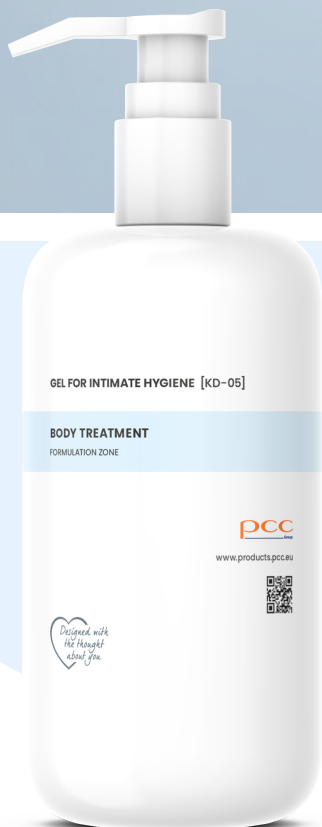

GEL POUR
'HYGIÈNE INTIME
[KD-05]

GEL POUR L'HYGIÈNE INTIME [KD-05]

PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
A	Aqua		jusqu'à	solvant
	Magnesium Laureth Sulfate	EXOsoft MG	25,0	tensioactif
	Betaine		2,0	actif
	Glycerin		2,0	agent hydratant
	PEG-7 Glyceryl Cocoate	rokacet-ko300g	1,0	tensioactif
	Sodium Benzoate, Potassium Sorbate		0,5	conservateur
	Coco-Glucoside, Glyceryl Oleate		0,5	tensioactif
	Lactic Acid		q.s.	Ajusteur de pH
	Parfum		0,2	fragrance
	Coco Betaine	ROKamina®K30	8,0	tensioactif



pH		4.0 - 4.5
Apparence	méthode visuelle	gel transparent
Viscosité [cP]	Brookfield LV, broche 34, vitesse 2,0 RPM, T : 25°C	1000 - 4000
Stabilité	1 mois à 5°C, TA, 40°C	confirmé

Procédure:

- Mélanger les ingrédients de la phase A. Ajouter les ingrédients de la phase A à l'eau et chauffer à 50°C. Mélanger jusqu'à obtention d'une solution homogène.
- Refroidir le lot à au moins 30°C.
- Ajouter lentement Coco Betaine et Parfum tout en mélangeant. Mélanger jusqu'à homogénéité.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

