

MICELLAR EMULSION [KD-86.1]

BODY TREATMENT

FORMULATION ZONE





MICELÁRNÍ EMULZE [KD-86.1]

MICELÁRNÍ EMULZE [KD-86.1]


PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
Α	Aqua		do	solventní
	Methylparaben		0,25	konzervační
	Ethylparaben		0,25	konzervační
	Glycerin		0,20	solventní
	Cetearyl alcohol	ExoAlc 1618 vločky	2,40	stabilizátor emulze
	Stearic Acid		0,30	modifikátor reologie
	Sodium Lauryl Sulfate	ROSULfan®L	1,50	povrchově aktivní látka



рН		5.0 - 7.0
Vzhled	vizuální metoda	bílá emulze
Stabilita	1 měsíc při 5 °C, RT, 40 °C	potvrzeno

Procedure:

- V hlavní nádobě smíchejte přísady. Zahřívejte na 75-80 °C za míchání. Homogenizace s 800-1200 RPM, 90 sec.
- 2. Během míchání se dávka ochladí na 50 °C. Homogenizace s 800-1200 ot./min, 60 sec.
- 3. Vsázka se za míchání ochladí na 25 °C. Homogenizujte s 800-1200 ot./min., 30 sec.

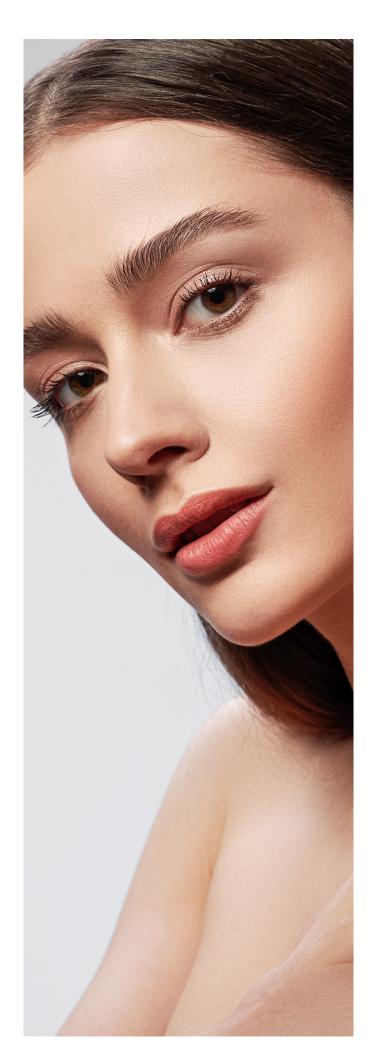



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

www.products.pcc.eu

PCC Group Sienkiewicza 4 56-120 Brzeg Dolny Poland

e-mail: products@pcc.eu

