




CURA PERSONALE
TRATTAMENTO CORPO

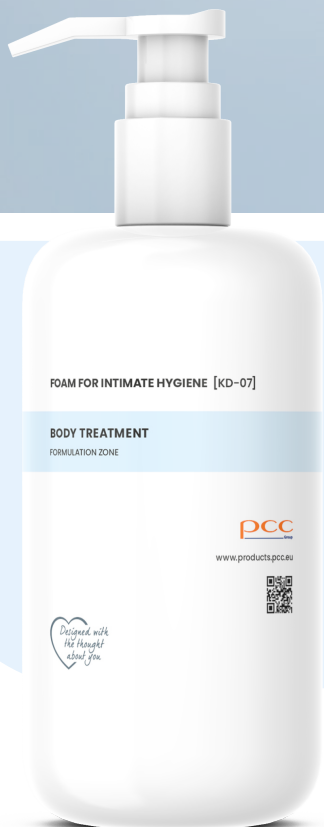

SCHIUMA PER IGIENE
INTIMA [KD-07]

FOAM FOR INTIMATE HYGIENE [KD-07]

BODY TREATMENT
FORMULATION ZONE

pcc

www.products.pcc.eu



Designed with
the thought
about you

SCHIUMA PER IGIENE INTIMA [KD-07]

PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
A	Aqua		fino a	solvente
	Glycerin		4,00	agente idratante
	Magnesium Laureth Sulfate	EXOsoft MG	4,00	tensioattivo
	Disodium Laureth Sulfosuccinate	EXOsoft L3 / 40	4,00	tensioattivo
	Betaine		0,50	attivo
	Sodium Benzoate, Potassium Sorbate		0,50	conservante
	Lactic Acid		q.s.	regolatore di pH
B	Panthenol		0,10	attivo
	PEG-120 Methyl Glucose Dioleate		0,25	addensante
C	Cocamidopropyl Betaine	ROKAmina®K30	2,00	tensioattivo
	Parfum		0,20	fragranza



pH		4.0 - 4.5
Aspetto	metodo visivo	metodo visivo giallo brillante
Stabilità	1 mese a 5°C, TA, 40°C	confermato

Procedure:

1. In un recipiente principale unire gli ingredienti della fase A. Aggiungere gli ingredienti della fase A all'acqua calda (40-45°C). Mescolare fino a uniformare.
2. Aggiungere PEG-120 Metil Glucosio Dioleato e Pantenolo. Mescolare fino a uniformare. Raffreddare il batch fino ad almeno 30°C.
3. Aggiungere Cocamidopropyl Betaine e Parfum durante la miscelazione. Mescolare fino a uniformare.
4. Se necessario, regolare il pH con l'acido lattico a 4,0 - 4,5.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

