




PERSONLIG VÅRD
KROPPSBEHANDLING

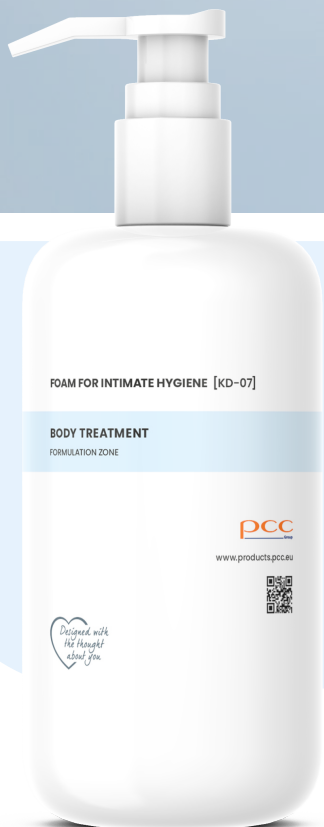

SKUM FÖR INTIMAT HYGIEN [KD-07]

SKUM FÖR INTIMAT HYGIEN [KD-07]

PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
A	Aqua		upp till	lösningsmedel
	Glycerin		4,00	fuktgivande medel
	Magnesium Laureth Sulfate	exosoft-mg	4,00	tensid
	Disodium Laureth Sulfosuccinate	EXOsoft L3/40	4,00	tensid
	Betaine		0,50	aktiva
	Sodium Benzoate, Potassium Sorbate		0,50	konserveringsmedel
	Lactic Acid		q.s.	pH-justerare
B	Panthenol		0,10	aktiva
	PEG-120 Methyl Glucose Dioleate		0,25	förtjockningsmedel
C	Cocamidopropyl Betaine	ROKamina®K30	2,00	tensid
	Parfum		0,20	doft



pH		4.0 - 4.5
Utseende	visuell metod	visuell metod ljusgul
Stabilitet	1 månad vid 5°C, RT, 40°C	bekräftad

Procedure:

1. Blanda ingredienser från fas A i ett huvudkär. Tillsätt ingredienser från fas A till varmt vatten (40-45°C). Blanda tills det är enhetligt.
2. Tillsätt PEG-120 metylglukosdioleat och pantenol. Blanda tills det är enhetligt. Kyl satsen till minst 30°C.
3. Tillsätt Cocamidopropyl Betaine och Parfum under blandningen. Blanda tills det är enhetligt.
4. Om det behövs, justera pH med mjölksyra till 4,0 - 4,5.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

