




CURA PERSONALE
TRATTAMENTO VISO

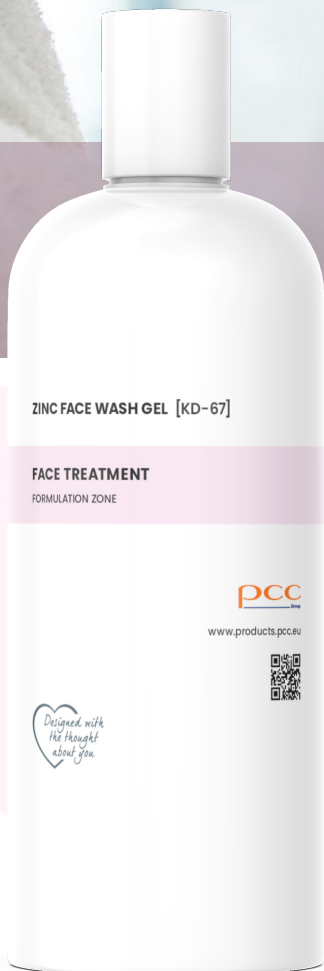

GEL DETERGENTE VISO ZINCO [KD-67]

GEL DETERGENTE VISO ZINCO [KD-67]

PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
A	Zinc Coceth Sulfate	exosoft-zn	8,0000	tensioattivo
	Sodium Laureth Sulfate	SULFOROKAnol® L227/1	4,0000	tensioattivo
	Phenoxyethanol, Ethylhexylglycerin		0,8000	conservante
	Allantoin		0,1000	attivo
	Betaine		0,5000	attivo
B	PEG-120 Methyl Glucose Dioleate		1,0000	addensante
C	Parfum		0,2500	fragranza
	Polysorbate 20	ROKwinol 20	0,2500	tensioattivo
D	CI 19140		0,0001	colorante
	CI 19140		0,0055	colorante
E	Lactic Acid		0,0500	regolatore di pH
F	Coco-betaine	ROKAmina®K30B	7,0000	tensioattivo
A	Aqua		78,0000	solvente



Viscosità [cP] Brookfield LV, mandrino 34, velocità 2,5 RPM, T: 25°C 1500 - 5000

Aspetto metodo visivo emulsione leggermente grigia

pH 4.5 - 5.2

Procedure:

1. In un recipiente principale unire gli ingredienti della fase A – mescolare fino a renderli uniformi.
2. In un recipiente separato preparare la fase C – mescolare fino a ottenere un composto uniforme.
3. Aggiungere gli ingredienti della fase B - E – mescolare fino a ottenere un composto omogeneo.
4. Aggiungere lentamente Coco Betaine durante la miscelazione. Mescolare fino a uniformare.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

