




SOINS PERSONNELS  
SOIN DU VISAGE

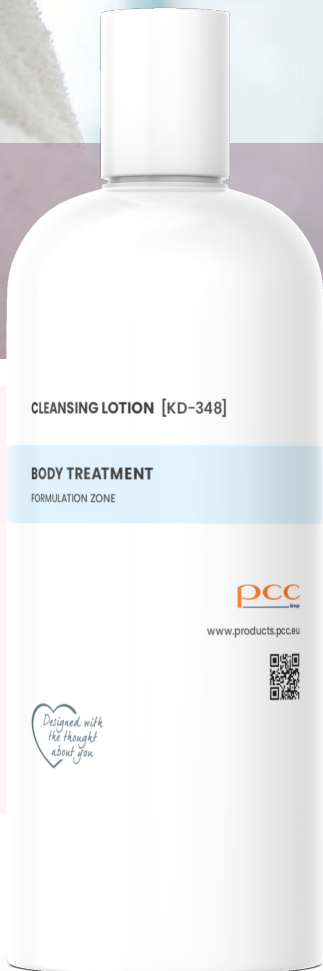

# LOTION NETTOYANTE [KD-348]

# LOTION NETTOYANTE [KD-348]

PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
A	Aqua		jusqu'à	solvant
	Benzyl Alcohol, Ethylhexylglycerin, Tocopherol		0,60	conservateur
	Sclerotium Gum, Xanthan Gum		0,25	modificateur de rhéologie
	Lactic Acid		0,20	Ajusteur de pH
B	Helianthus Annuus Seed Oil		6,00	émollient
	Cetearyl alcohol	Flocons ExoAlc 1618	3,50	stabilisateur d'émulsion
	Polysorbate 80	ROKwinol 80	3,00	émulsifiant
	PPG-15 Stearyl ether	ROKAnol® SP15L	6,00	émollient
	PPG-5-Ceteth-20	ROKAnol MB	2,00	émollient
	Potassium Cocoate	EXOsoft PC35	2,00	tensioactif
	Potassium Oleate	EXOsoft PO30	3,00	tensioactif



Stabilité	1 mois à 5°C, TA, 40°C	confirmé
Apparence	méthode visuelle émulsion	émulsion
pH		7.5 - 8.5

## Procédure:

1. Dans un récipient principal, combiner les ingrédients de la phase A. Chauffer la phase A à 75-80°C tout en mélangeant.
2. Dans un récipient séparé, je combine les ingrédients de la phase B.
3. Chauffer la phase B à 75-80°C.
4. Ajouter B dans A, bien mélanger, maintenir A/B à 75-80°C. Homogénéiser avec 2000-3000 RPM, 90 sec.
5. Refroidir le lot à 30°C tout en mélangeant.
6. Ajouter EXOsoft PC35, EXOsoft PO30 – mélanger jusqu'à homogénéité.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

[www.products.pcc.eu](http://www.products.pcc.eu)

PCC Group  
Sienkiewicza 4  
56-120 Brzeg Dolny  
Poland

e-mail: [products@pcc.eu](mailto:products@pcc.eu)

