




CUIDADO PERSONAL
TRATAMIENTO CORPORAL

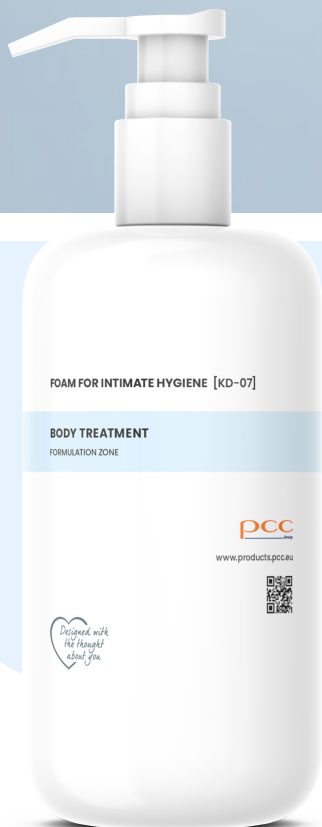

ESPUMA PARA HIGIENE
ÍNTIMA [KD-07]

ESPUMA PARA HIGIENE ÍNTIMA [KD-07]

PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
A	Aqua		hasta	solvente
	Glycerin		4,00	agente hidratante
	Magnesium Laureth Sulfate	EXOsoft MG	4,00	surfactante
	Disodium Laureth Sulfosuccinate	EXOsoft L3 / 40	4,00	surfactante
	Betaine		0,50	activo
	Sodium Benzoate, Potassium Sorbate		0,50	preservativo
	Lactic Acid		q.s.	ajustador de pH
B	Panthenol		0,10	activo
	PEG-120 Methyl Glucose Dioleate		0,25	espesante
C	Cocamidopropyl Betaine	ROKamina®K30	2,00	surfactante
	Parfum		0,20	fragancia



pH		4.0 - 4.5
aparición	metodo visual	método visual amarillo brillante
Estabilidad	1 mes a 5°C, TA, 40°C	confirmado

Procedure:

1. En un recipiente principal combine los ingredientes de la fase A. Agregue los ingredientes de la fase A al agua tibia (40-45°C). Mezclar hasta que quede uniforme.
2. Añadir PEG-120 dioleato de glucosa de metilo y pantenol. Mezclar hasta que quede uniforme. Enfriar el lote hasta por lo menos 30°C.
3. Agregue Cocamidopropyl Betaine y perfume durante la mezcla. Mezclar hasta que quede uniforme.
4. Si es necesario, ajuste el pH con ácido láctico a 4,0 - 4,5.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

