




CURA PERSONALE  
TRATTAMENTO VISO

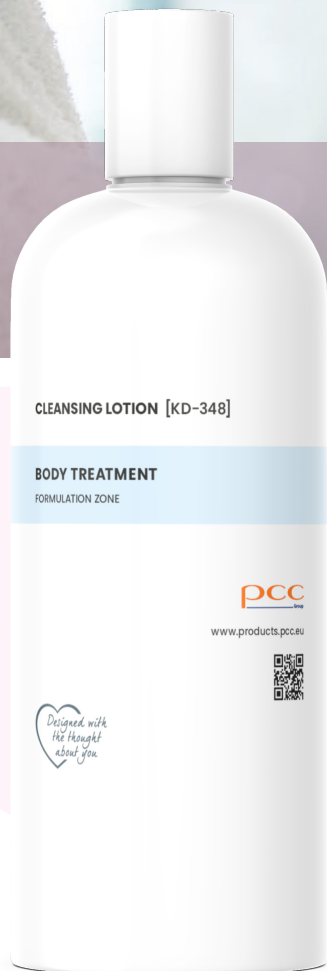

LOZIONE DETERGENTE  
[KD-348]

# LOZIONE DETERGENTE [KD-348]

PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
A	Aqua		fino a	solvente
	Benzyl Alcohol, Ethylhexylglycerin, Tocopherol		0,60	conservante
	Sclerotium Gum, Xanthan Gum		0,25	modificatore di reologia
	Lactic Acid		0,20	regolatore di pH
B	Helianthus Annuus Seed Oil		6,00	emolliente
	Cetearyl alcohol	ExoAlc 1618 fiocchi	3,50	stabilizzatore di emulsione
	Polysorbate 80	ROKwinol 80	3,00	emulsionatore
	PPG-15 Stearyl ether	ROKAnol® SPI5L	6,00	emolliente
	PPG-5-Ceteth-20	ROKAnol MB	2,00	emolliente
	Potassium Cocoate	EXOsoft PC35	2,00	tensioattivo
C	Potassium Oleate	EXOsoft PO30	3,00	tensioattivo



Stabilità	1 mese a 5°C, TA, 40°C	confermato
Aspetto	metodo visivo emulsione	emulsione
pH		7.5 - 8.5

## Procedure:

1. In un recipiente principale unire gli ingredienti della fase A. Riscaldare la fase A a 75-80°C durante la miscelazione.
2. In un recipiente separato unisco gli ingredienti della fase B.
3. Riscaldare la fase B a 75-80°C.
4. Aggiungere B in A, mescolare bene, mantenere A/B a 75-80°C. Omogeneizzare con 2000-3000 RPM, 90 sec.
5. Raffreddare il lotto fino a 30°C durante la miscelazione.
6. Aggiungere EXOsoft PC35, EXOsoft PO30 - mescolare fino a uniformare.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

[www.products.pcc.eu](http://www.products.pcc.eu)

PCC Group  
Sienkiewicza 4  
56-120 Brzeg Dolny  
Poland

e-mail: [products@pcc.eu](mailto:products@pcc.eu)

