




CURA PERSONALE
TRATTAMENTO VISO

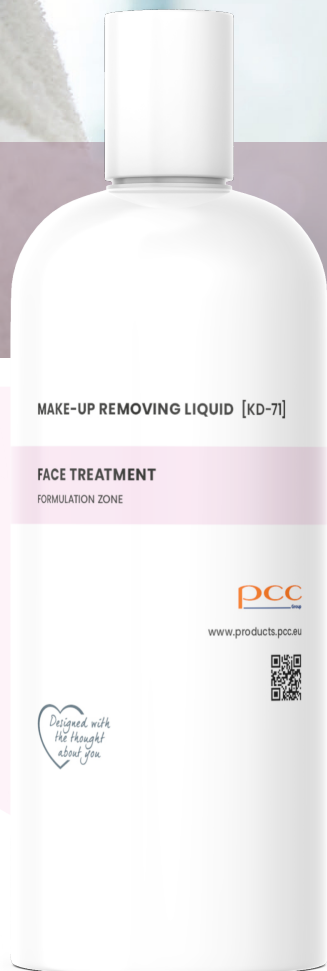

LIQUIDO STRUCCANTE
[KD-71]

LIQUIDO STRUCCANTE [KD-71]

PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
A	Aqua		92,94	solvente
	Betaine		0,25	attivo
B	Glycerin		1,00	agente idratante
	Xanthan Gum		0,05	modificatore di reologia
C	Sodium Lauroyl Sarcosinate	ROKAtend LS	4,00	tensioattivo
D	Polysorbate 20	ROKwinol 20	0,20	tensioattivo
	Phenoxyethanol, Ethylhexylglycerin		1,00	conservante
	Propylene Glycol		0,50	solvente
E	Citric acid		0,06	regolatore di pH



pH		5.0 - 6.5
Aspetto	metodo visivo	liquido trasparente
Stabilità	1 mese a 5°C, TA, 40°C	confermato

Procedure:

1. In un recipiente principale unire gli ingredienti della fase A e riscaldare fino a 65-70°C.
2. Aggiungere la gomma di xantano alla glicerina - mescolare fino a ottenere un composto uniforme. Aggiungere la fase B alla fase A durante la miscelazione. Mescolare fino a uniformare.
3. Raffreddare il batch fino ad almeno 50°C.
4. Unire gli ingredienti della fase D in un recipiente separato e mescolare fino a ottenere un composto uniforme.
5. Aggiungere gli ingredienti della fase C, D ed E alla fase A durante la miscelazione. Mescolare fino a uniformare.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

